


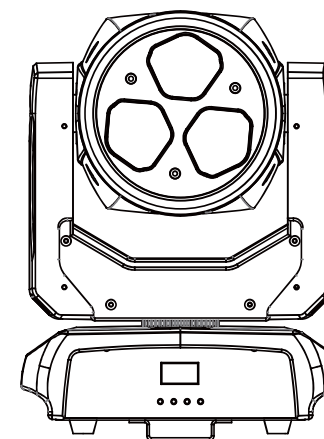

Pastello Minizoom



User manual

This manual contains important information.
Please read before operating fixture.



9. FUSE REPLACEMENT

- a. Unscrew the fuse holder and remove the damaged fuse.
- b. Replace with exact same type fuse and screw the fuse holder back in its place.

10. TECHNICAL SPECIFICATIONS

Source: 4 x 30W RGBW 4in1 LED

Beam angle: 4°-60° motorized zoom

Power consumption: 150W max.

Fuse: F2A / 250V

Power supply: AC 100~240V, 50-60Hz

Dimensions: 260 x 180 x 360 mm

Weight: 6 kg

8. DMX MODES

| 8CH | 16CH | DMX VALUE | FUNCTION |
|-----|------|-----------|--|
| 1 | 1 | 0-255 | Pan movement 540° |
| | 2 | 0-255 | Fine control of Pan |
| 2 | 3 | 0-255 | Tilt movement 270° |
| | 4 | 0-255 | Fine control of Tilt |
| | 5 | 0-255 | Pan & Tilt speed from fast to slow |
| 3 | 6 | 0-255 | Master dimmer 0-100% |
| | | 0-9 | Strobe open |
| 4 | 7 | 10-250 | Strobe from slow to fast |
| | | 251-255 | Strobe open |
| | 8 | 0-255 | Red intensity 0-100% |
| | 9 | 0-255 | Green intensity 0-100% |
| | 10 | 0-255 | Blue intensity 0-100% |
| | 11 | 0-255 | White intensity 0-100% |
| | 12 | 0-255 | Various color temperature |
| | | 0-10 | No function |
| | | 11-20 | R |
| | | 21-30 | G |
| | | 31-40 | B |
| | | 41-50 | W |
| | | 51-60 | R+W |
| | | 61-70 | G+W |
| | | 71-80 | B+W |
| | | 81-90 | R+G |
| | | 91-100 | G+B |
| | | 101-110 | R+B |
| | | 121-130 | G+B+W |
| | | 131-140 | R+B+W |
| | | 141-150 | R+G+B+W |
| | | 151-200 | Color step changing from slow to fast |
| | | 201-255 | Color cross fade from slow to fast |
| 6 | 14 | 0-255 | Zoom 0 - 100% |
| | | 0-100 | Beam effect from close to open (0-90 °) |
| | | 101-133 | Beam rotating back and forth from slow to fast |
| | | 134-194 | Beam CCW rotating from fast to slow |
| | | 195-255 | Beam CW rotating from slow to fast |
| | | 0-200 | No function |
| 8 | 16 | 201-220 | Reset after 3 seconds |
| | | 221-255 | No function |

1. UNPACKING

The following items are included in the box:

- 1 x MINI BEE EYE 120
- 1 x Mounting Bracket
- 1 x Power Cord
- 1 x User Manual

2. SAFETY INSTRUCTIONS

The product is for indoor use only.

Always turn off, unplug power and allow fixture to cool before servicing.

Ensure that fixture is properly grounded.

Please keep this User Guide for future consultation.

Always make sure that you are connecting to the proper voltage and that the line voltage you are connecting to is not higher than that stated on decal or rear panel of the fixture.

Always disconnect from power before servicing or replacing fuse.

Make sure power cord is never crimped or damaged.

Avoid looking directly into the LED light beam at a close distance!

3. FEATURES

RGBW color wash and beam effects

Motorized zoom 4°-60°

4 working modes: DMX, Auto, Sound, Master/Slave

DMX modes: 8/16 channels

IR remote controller included


Pan / Tilt : 540° / 210°, automatic correction

0-100% linear dimmer

1-20 fps strobe

4-button OLED display


4. PRODUCT OVERVIEW

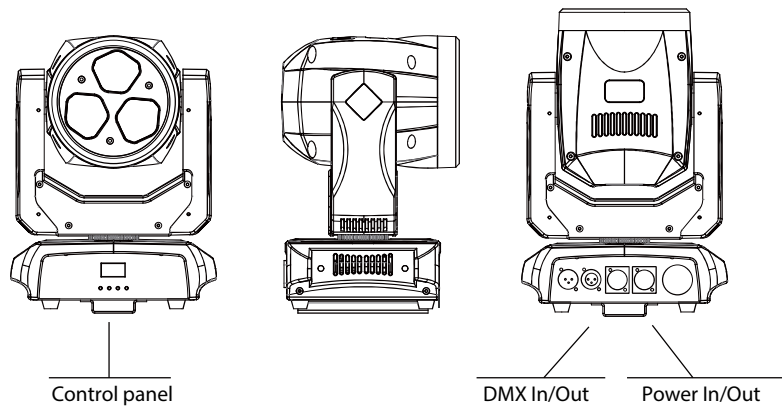

5. MOUNTING

The Moving Head is fully operational in any mounting position, hanging upside-down, side mounted, or set on a flat llevel surface, etc.

IMPORTANT!!! Safety cables must always be used when unit is celling or truss mounted. The safety cable must be capable of holding 10 times the weight of the fixture.

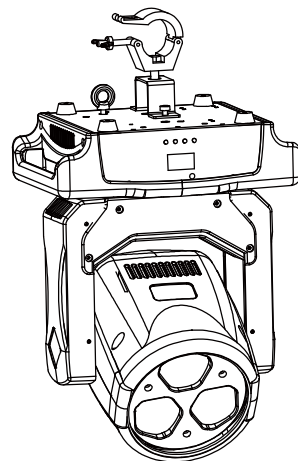

6. AC POWER

The fixture works on AC 200-240V 50-60Hz. All units must be powered directly from a switched circuit. This unit cannot be run on a rheostat or dimmer circuit even if used solely for a 0% to 100% switching.

WARNING!!! All fixtures must be connected to circuits with a suitable Earth Ground.

7. MENU MAP

